LASER SENSORS

PHOTOELECTRIC SENSORS MICRO PHOTOELECTRIC SENSORS AREA SENSORS LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS** PARTICUI AR USE SENSORS SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

LASER MARKERS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

PLC

## ER-TF

FIBER SENSORS Related Information

General terms and conditions...... F-7

■ Glossary of terms...... P.1497

■ Selection guide ......P.1157~ ■ General precautions ......P.1501





## Slim in shape, Wide in charge removal area, An evolutionary form in expression

panasonic.net/id/pidsx/global

#### Problems with cell production lines


Ionizers up until now had not been able to fully meet the needs for on-site work.





- · One unit is not enough to cover the working area.
- · Must be located near your hands for effective static removal.
- · Two units take up too much space on the workbench.

# Bar type

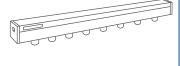

- · Compressed air is costly.
- · Complicated piping makes layout change troublesome.
- · Disturbance of airflow or contact with discharger decreases work efficiency.

#### **Characteristics of ER-TF series**

A style not seen before that pursues performance in cell production lines and resolves dissatisfaction with existing ionizers.



The air blowing direction can be easily adjusted even after installation



Detection of entry to the discharger interrupts the high voltage circuit



Discharge needle units can be detached or attached quickly

Selection Guide

Cleaning Box

Pulse Air-gun Electrostatic


> ER-X **ER-TF**

FR-VS02 ER-VW

ER-Q ER-F

#### **APPLICATIONS**



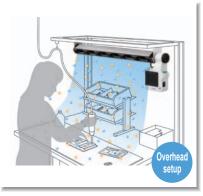



### Indicators showing operation conditions

This section will now explain the indicator lights that indicate such abnormalities as maintenance time of the discharge needle unit and the decrease in the amount of ventilation due to filter clogging.



#### ERROR indicator:

Lights up when an intrusion of a foreign object into the discharger is detected by the entry detection function, or when an abnormal discharge, air intake constraint caused by clogged filter, or any other abnormality of the fan is detected.

#### **CHECK indicator:**

Lights up when it is time for maintenance of the discharge needle unit, or when a drop in the fan speed resulting from filter clogging is detected.

#### **FAN indicator:**

Lights up when a fan error or a fan check is detected. **BAR** indicator:

Lights up when a discharger error or a discharger check is detected.

#### Airflow adjustable in 4 levels

Fan speed can be adjusted in 4 levels. By setting the fan speed to MAX, speedy static removal of wide area is possible.



#### **Easy filter cleaning**

The fan air intake filter cleaning.



can be easily taken out by sliding open the cover. This greatly reduces the man-hour in

## Silent fan cover (option) is available.

Without decreasing the airflow, it is possible to reduce noise during fan suction.

You can easily attach the silent fan cover to the front of the main unit fan with a single step.



FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE FLOW SENSORS INDUCTIVE PROXIMITY

**SENSORS** PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Cleaning Box

Pulse Air-gun

Electrostatic

ER-X

**ER-TF** 

ER-VS02 ER-VW

ER-Q

ER-F

FIBER SENSORS

## **ORDER GUIDE**

## LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Electrostatic Sensor

ER-X ER-TF

ER-VS02 ER-VW

> ER-Q ER-F

Ionizer main unit

Туре	Appearance	Charge removal time $(\pm 1,000 \text{ V} \rightarrow \pm 100 \text{ V})$	Ion balance	Model No.
		1 sec. approx. (Note 1)	±10 V or less (Note 2)	ER-TF04-EX
Wide-area fan type				ER-TF06-EX
				ER-TF08-EX

Notes: 1) Typical value at a distance of 200 mm 7.874 in from the front surface of the air outlet at the unit center at maximum fan speed.

2) Typical value at a distance of 300 mm 11.811 in from the front surface of the air outlet at the unit center at maximum fan speed.

Please prepare an AC cable separately as it is needed.
 The following cables are available as optionals:

CN-ACCN-C2: AC cable (conforming to CCC), CN-ACKR-C2: AC cable (conforming to KTL)



Connector configuration (IEC 60320 C7)

## **OPTIONS**

Designation	Model No.	Description		
AC cable	CN-ACCN-C2	AC cable (conforming to CCC), Length: 2 m 6.562 ft		
AC Cable	CN-ACKR-C2	AC cable (conforming to KTL), Length: 2 m 6.562 ft		
Mounting unit	ER-TF06MS1	Mounting unit for <b>ER-TF06-EX</b> . Allows easy attachment or detachment of the main unit.		
Air filter ER-TFF×10		Air filter for fan air intake part (10 pcs. per set)		
Discharge needle unit <b>ER-TFANT</b>		Unit with tungsten needles (1 pc.)		
Silent fan cover	ER-TFSC	To be mounted on the front part of the fan unit as a cover to reduce the fan blowing sound.		

## **Mounting unit**

·ER-TF06MS1

#### Air filter


•ER-TFF×10

#### Discharge needle unit

•ER-TFANT



#### Silent fan cover ·ER-TFSC

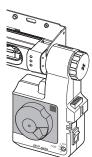

#### SPECIFICATIONS

Туре		Туре	Wide-area fan type		
Item	1	Model No.	ER-TF04-EX	ER-TF06-EX	ER-TF08-EX
Charge removal time ( $\pm 1,000 \text{ V} \rightarrow \pm 100 \text{ V}$ )		val time (±1,000 V → ±100 V)	1 sec. approx. (Note 2)		
Ion balance		ce	±10 V or less (Note 3)		
Ozone generation		neration	0.02 ppm or less (Note 3)		
Power supply voltage		pply voltage	Accessory AC adapter input: 100 to 240 V AC ±10 % 50/60 Hz (Output: 24 V DC)		
Power consumption		nsumption	80 VA or less (at 100 V: 70 VA or less)		
Discharge method		e method	Steady-state DC		
Discharge output voltage		e output voltage	±6,000 V approx.		
Error output		out	NPN open-collector transistor • Maximum sink current: 50 mA • Applied voltage: 30 V DC or less (between output and 0 V) • Residual voltage: 1 V or less (at 50 mA sink current)		
Output operation		put operation	OFF if abnormal discharge, object inserted into discharge window or fan problem detected; normally ON		
	Short-circuit protection		Incorporated		
		POWER	Green LED (Lights up when power supplied)		
S	Bar	ERROR	Red LED (Lights up when discharge part error or fan error is detected)		
Indicators		CHECK	Orange LED (Lights up when discharge part check or fan check is detected)		
Indi	Fan	Discharge part status	Yellow LED (Lights up when discharge part error or discharge part check is detected)		
	L L	Fan status	Yellow LED (Lights up when fan error or fan check is detected)		
Ambient temperature		emperature	0 to +50 °C +32 to +122 °F (No dew condensation), AC adapter: 0 to +40 °C +32 to +104 °F		
Ambient humidity		numidity	35 to 65 % RH (No dew condensation)		
Material			Bar unit enclosure: ABS, Fan unit enclosure: ABS, Discharge needles: Tungsten, Mounting bracket: SPCC		
Weight			Net weight: 1.0 kg approx.	Net weight: 1.2 kg approx.	Net weight: 1.4 kg approx.
Accessories		ies	AC adapter (Note 3), F.G. connection cable: 1 pc., Spare replacement filters: 5 pcs., Three-pronged outlet with ground pin: 1 pc., Blindfold seals: 2 sheets		

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

- 2) Typical value at a distance of 200 mm 7.874 in from the front surface of the air outlet at the unit center at maximum fan speed.
- 3) Typical value at a distance of 300 mm 11.811 in from the front surface of the air outlet at the unit center at maximum fan speed.
- 4) Please prepare an AC cable separately as it is needed.

The following cables are available as optionals: CN-ACCN-C2: AC cable (conforming to CCC), CN-ACKR-C2: AC cable (conforming to KTL)

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Static Removers Cleaning Box

Pulse Air-gun Electrostatic Sensor

ER-X

ER-TF ER-VS02

ER-VW ER-Q

ER-F

FIBER SENSORS

LASER SENSORS PHOTO:

MICRO PHOTO-ELECTRIC SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / SENSORS

AREA SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

> MACHINE VISION SYSTEMS

CURING SYSTEMS

FA COMPONENTS


Pulse Air-gun Electrostatic Sensor

> ER-X ER-TF ER-VS02 ER-VW ER-Q

> > ER-F

## I/O CIRCUIT DIAGRAM

#### I/O circuit diagram

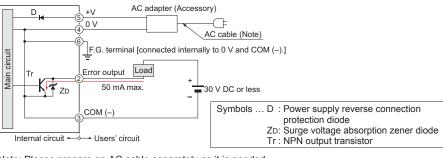


Note: Please prepare an AC cable separately as it is needed.

The following cables are available as optionals: CN-ACCN-C2: AC cable (conforming to CCC) CN-ACKR-C2: AC cable (conforming to KTL)

#### Pin position

Terminal No.	Terminal name
1	N.C. (no connection)
2	Error output
3	COM (-)
4	0 V
5	+V
6	F.G.

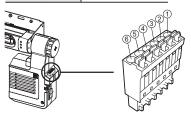


## **CHARGE REMOVAL CHARACTERISTICS (TYPICAL)**


Measured using a 150 mm × 150 mm 5.906 in × 5.906 in CPM (charge plate monitor). (At center of CPM)

#### **ER-TF04-EX**


#### Charge removal time

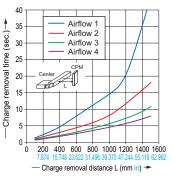


#### Correlation between charge removal distance and ion balance

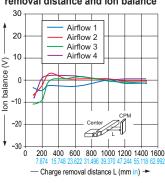

## Charge removal field

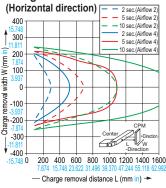


#### Ion balance (Horizontal direction) [Airflow 4]

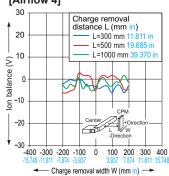


#### **ER-TF06-EX**


#### Charge removal time

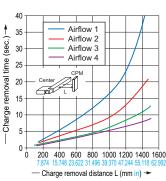


#### Correlation between charge removal distance and ion balance

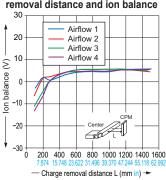

#### Charge removal field

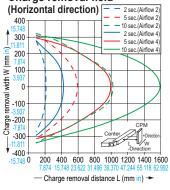


#### Ion balance (Horizontal direction) [Airflow 4]

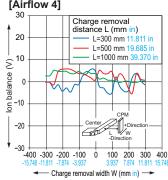


#### ER-TF08-EX


#### Charge removal time

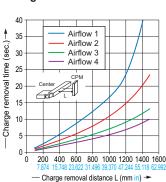


#### Correlation between charge removal distance and ion balance

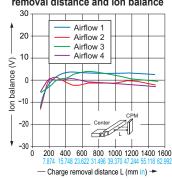

## Charge removal field

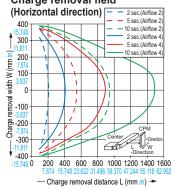


## Ion balance (Horizontal direction)

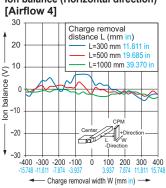

• This product is to remove static electricity for industrial use. Never use this product for medical equipment etc. relating to maintenance / supervision of human life or body, for prevention of accidents which damage a human life or properties, or for safety maintenance.

· Do not use this product near or around surroundings containing any dangerous materials, such as combustible

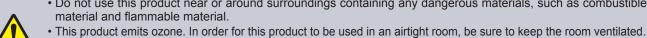


- Do not place any objects that may obstruct the inflow of air within 10 mm 0.394 in of the front of the fan air intake
- part. Doing so may cause accident or product malfunction. · Be sure to ground the main body of this product via ground terminal to ensure electrical shock prevention and reliable charge removal.
- · Since the charge needle is applied with high voltage, never touch the discharge needle, or an electric shock may result.
- · Since the tip of the discharge needle is sharp, take sufficient care in handling the discharge needle, or injuries may result.

#### Mounting

• Do not place any objects or any other charge removal equipment within 100 mm 3.937 in of the ionized air outlet front (refer to the illustration below), as they may affect operation and performance of the ionizer.



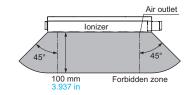

#### Maintenance

- · Always be sure to turn off the power before carrying out any care and maintenance of the product.
- The tip of the discharge needle is sharp, so be careful not to touch it while cleaning.
- · When the product is used for long periods of time, dust and other foreign particles may accumulate on the discharge needle, the area around it, and on the fan filter. Clean regularly (discharge needle: about once a week, air filter: about once every two months), otherwise their charge removal performance will drop and operating problems or accidents may occur.
- The discharge needle is a consumable part. If the charge removal performance is not restored after cleaning the discharge needle, the discharge needle unit should be replaced. All of the discharge needle units should be replaced at the same time.


DIMENSIONS (Unit: mm in)

671.5 610 510 560 440

ER-TF08-EX

The CAD data in the dimensions can be downloaded from our website

**ER-TF**<sub>-</sub>-**EX** 

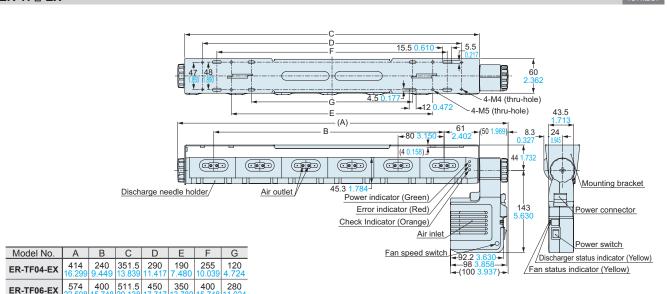

FIBER SENSORS

LASER SENSORS

РНОТО ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE

MENT SENSORS

LASER MARKERS

PLC HUMAN

MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Cleaning Box

ER-X

ER-VS02

ER-VW ER-Q

ER-F